

GASTROBACK[®]

DESIGN WARMING TRAY

OPERATING INSTRUCTIONS



Art.-No. 42491 »Design Warming Tray«

Read all provided instructions before first usage!
Model and attachments are subject to change
For household use only!

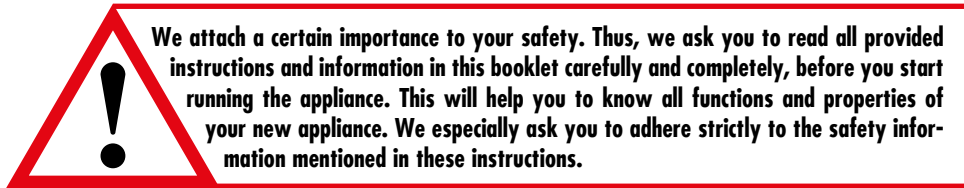


TABLE OF CONTENTS

Important Safeguards	20
General Safety Instructions.....	20
Important Safeguards for Electrical Appliances	22
High Temperatures – Risk of Burns	23
Technical Specifications.....	24
Knowing Your Design Warming Tray.....	24
Temperature Control	25
Before First Use.....	25
Operation	26
Solving Problems.....	27
Care and Cleaning	28
Storage	28
Notes for Disposal	29
Information And Service.....	29
Warranty.....	30
Household Use.....	30

DEAR CUSTOMER!

Congratulations! The »Citrus Juicer Home Culture« is designed for juicing halved citrus fruits efficiently and easily: oranges, grape fruits, limes, lemons and tangerines.

The »Citrus Juicer Home Culture« is designed for a quick and easy operation and cleaning after juicing. For your convenience, the juice cone is driven by an energy-saving powerful 100W motor in a stable and shook-proof stainless steel motor housing. All parts coming in contact with food are removable and easy to clean.

These instructions for use will inform you about the various functions and features which makes it easy to take pleasure in your new »Citrus Juicer Home Culture«.

We hope that you will enjoy your new »Citrus Juicer Home Culture«.

Your Gastroback GmbH



IMPORTANT SAFEGUARDS

Carefully read all instructions before operating this appliance and save these instructions for further reference. Do not attempt to use this appliance for any other than the intended use, described in these instructions. Any other use, especially misuse, can cause severe injuries or damage by electric shock, heat, or fire.

These instructions are an essential part of the appliance. Do not pass the appliance without this booklet to third parties.

Any operation, repair and technical maintenance of the appliance or any part of it other than described in these instructions may only be performed at an authorised service centre. Please contact your vendor.



GENERAL SAFETY INSTRUCTIONS

- This appliance is intended for household use and **NOT** intended for use in moving vehicles. Do not operate or store the appliance in humid or wet areas or outdoors. Any use of accessories, attachments or spare parts that are not recommended by the manufacturer or damaged in any way may result in injuries to persons and/or damage.
- Check the entire appliance and its parts regularly for proper operation especially the power cord (e.g. check for distortions, discolouration, cracks). Do not operate the appliance, when the appliance or any part of it is likely to be damaged, to avoid risk of fire, electric shock or any other injuries to persons and/or damage. The appliance or its parts are likely to be damaged, if the appliance has been subject to inadmissible strain (e.g. overheating, mechanical or electric shock), or if there are any cracks, excessively frayed or melted parts, or distortions (e.g. heating plate is broken or cracked, insulation of the power cord is melted), or if there is any kind of malfunction (e.g. overheating, smoke coming out). If one of these cases occurs during operation, immediately unplug the appliance. Get in contact with an authorized service centre for examination and/or repair.
- Operate the appliance on a well accessible, stable, level, dry, heat-resistant, and suitable large table or counter. Do not place the appliance over a power cord or on any surfaces sensitive to heat, or near the edge of the table or counter, or on wet or inclined surfaces. **Do**

not place the appliance on a glass or stone surface during operation. Due to local heating, glass or stone could crack. Always keep the appliance and working space clean and dry. Wipe off spilled liquids immediately.

- This appliance is **NOT** intended for use by persons (including children of at least 8 years) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. **Children must always be supervised to ensure that they do not play with the appliance or any part of it or the packaging.** Cleaning shall not be made by children unless they are older than 8 years and supervised. Always keep the appliance where it is dry, frost-free, and clean, and where young children cannot reach it. Do not leave the appliance or any part of it unattended, when in reach of young children.
- Do not place the appliance or any part of it in a range, or on or near hot surfaces (e.g. burner, heater or oven). Do not use the appliance or any parts of the appliance for any other purpose than the intended use. Exclusively use the appliance for warm-keeping edible food in suitable, heat-resistant containers. Do not handle the appliance or any part of it with violence. The ventilation slits in the housing must always be unobstructed.
- The appliance is **NOT** intended for heating cold foodstuffs. Do not place any frozen food on the hot heating plate. Only place warm cooking pots and pans or heat-resistant bowls / dishes on the hot heating plate. Always wait until the heating plate reached an appropriate temperature before placing hot pots and pans on it. Otherwise the heating plate could crack.
- Do not use any hard, sharp or edged objects (e.g. knives, forks, metal scraper) with the appliance or any part of it.
- Always unplug the appliance, when not in use. Do not leave the appliance unattended, while connected to the power supply. Always hold the appliance at the handles for moving. Do not hold the appliance at the power cord for moving the appliance.

- Do not use any corrosive chemicals, abrasive cleaners, or cleaning pads (e.g. bleach, oven cleaner, metal scouring pads) for cleaning to avoid damage to the surfaces. **Do not place the appliance or power cord in an automatic dishwasher.**
- Do not leave any food dry on the appliance. Always clean the appliance after each use to prevent accumulation of baked-on foods (see “Care and Cleaning”). Always keep the appliance and its parts, where it is clean.

 **IMPORTANT SAFEGUARDS FOR ELECTRICAL APPLIANCES**

The appliance is heated electrically. Place the appliance near a suitable wall power outlet to connect the appliance directly to a protected mains power supply with protective conductor (earth/ground) connected properly. Ensure that the voltage rating of your mains power supply corresponds to the voltage requirements of the appliance (220-240V, 50/60Hz, AC, rated for at least 10A) to avoid interference with other appliances. The installation of a residual current operated circuit breaker (r.c.c.b.) with a maximum rated residual operating current of 30mA in the supplying electrical circuit is strongly recommended. If in doubt, contact your electrician for further information.

In various foreign countries, the specifications for power supplies are subject to incompatible norms. Therefore it is possible that power supplies in foreign countries do not meet the requirements for safe operation of the appliance. Thus, before operating the appliance abroad, ensure that safe operation is possible.

- Do not use any desk top multi socket outlet, external timer, extension cord, or remote control systems.
- Always handle power cords with care. The pins of power plugs must be smooth and clean. Always completely unwind power cords before use. Do not place the appliance on a power cord. Power cords may never be knotted, twisted, pulled, strained or squeezed. Do not let the plug or power cord hang over the edge of the table or counter. The power cord may not touch hot surfaces or sharp edges. Ensure that no one will pull the appliance by the power cord. Take care not


to entangle in the power cord. Always grasp the plug to disconnect the power cord. Do not touch the appliance or power plug with wet hands, when the appliance is connected to the power supply.

- **DO NOT** drip or spill any liquids on or in the appliance or power cord. Do not immerse the appliance or power cord in water or other liquids. Do not place the appliance on wet surfaces. When liquids overflowed or are spilled on the appliance, immediately unplug the appliance. Thereafter, clean and dry the appliance and let it dry naturally for at least 1 day. See: “Care and Cleaning”. Do not place the appliance in an automatic dishwasher.

 **HIGH TEMPERATURES – RISK OF BURNS**

- The DESIGN WARMING TRAY is designed for warm-keeping edible food in appropriate containers. For this purpose, the appliance is heated electrically. Thus, improper handling could cause severe injuries and damage. Please keep this in mind to avoid scalds and damage.
- Even the exterior of the appliance and the handles can be very hot during operation and up to 1/2 hour thereafter. Do not touch the hot surfaces with any parts or your body or any heat-sensitive objects. Only touch the appliance and its parts at the temperature control dial during operation and thereafter.
- Always leave the appliance cool down before moving or cleaning the appliance. Do not move the appliance or place the appliance on heat-sensitive surfaces, when it is still hot.
- **To avoid risk of explosion and fire: DO NOT heat any high-proof alcoholic liquid or alcoholic foodstuffs (e.g. mulled wine, grog) on the appliance. Do not pour any alcoholic liquid on the appliance. During operation do not place the appliance near any objects containing highly inflammable gases or liquids (e.g. spirit, propane gas cylinder, gas lighter).**

TECHNICAL SPECIFICATIONS

Model:	Art.-No.: 42491 Design Warming Tray
Power supply:	220-240V AC, 50/60 Hz
Maximum power consumption:	400 W
Length of power cord:	approx. 150 cm
Weight:	approx. 4.2 kg
Dimensions, complete appliance:	approx. 59.0 cm x 43.0 cm x 6.3 cm (width x depth x height)
Dimensions, heating plate:	54.0 cm x 41.0 cm
Maximum temperature:	approx. 110°C
Certification:	

These specifications may change without notice.

KNOWING YOUR DESIGN WARMING TRAY



- ① **Non-slip Rubber Feet**
for a stable stand on smooth surfaces
- ② **Tempered Glass Heating Plate**
without any annoying, protruding brim
- ③ **Stainless Steel Housing**

- ④ **Temperature Control Dial**
for selecting the desired temperature
- ⑤ **Heating Indicator**
- ⑥ **Ventilation Slits**
- ⑦ **Handles**

TEMPERATURE CONTROL

The temperature of the heating plate can be varied continuously. With the temperature control dial turned counter-clockwise to the stop ("0"), the heating plate is switched OFF. For your convenience, there are 4 temperature levels indicated on the temperature control dial.

⚠ CAUTION: In contrast to common ranges and heating devices, the desired temperature level digit must be adjusted to the black point at the left side of the temperature control dial. To switch OFF the appliance, always ensure to turn the dial counter-clockwise to the stop.

The settings of the temperature control dial correspond to the following temperature values.

Setting	Temperature
1	ca. 40 °C
2	ca. 60 °C
3	ca. 85 °C
4	ca. 110 °C

BEFORE FIRST USE

⚠ WARNING: DO NOT let young children play with the appliance, or any part of it, or the packaging!

1. Unpack the appliance and all accessories carefully. Check that no parts are damaged or missing (see: "Knowing Your »Design Warming Tray«").
2. Carefully remove all shipping materials and promotional materials, but **DO NOT** remove the yellow warning label or the model label. Especially ensure that there are no foreign objects (e.g. adhesive tape) sticking to the heating plate.

⚠ WARNING: Always switch OFF (turn the temperature control dial counter-clockwise to the stop), unplug, and leave the appliance cool down, before cleaning. Do not immerse the appliance or power cord in water or other liquids or spill any liquids on/in the appliance or power cord. **Do not place the appliance or power cord in an automatic dishwasher.**

3. Before first use and after a longer period of storage, clean the appliance and its parts (see: "Care and Cleaning").

OPERATION

⚠ WARNING: Always ensure that the appliance and all its parts and accessories are **out of reach of young children**. Your new DESIGN WARMING TRAY is intended for warm-keeping edible food in pans, pots and heat-resistant dishes / bowls. Thus, the heating plate and even the exterior and handles will become very hot during operation. During operation and several minutes thereafter only touch the appliance at the temperature control dial to avoid scalds. Do not move the appliance, when it is still hot.

During operation **DO NOT** place the appliance near any inflammable or explosive liquids or gases (e.g. spirit, propane gas cylinder, or gas lighter). Additionally, do not place the appliance on heat-sensitive surfaces or over power cords during operation, to avoid damage due to overheating and risk of fire and electric shock.

The appliance is **NOT** intended for heating up food directly. Do not place any food directly onto the heating plate. Use heat-resistant containers or cooking pots/pans. Keep in mind that the containers of your food may be hot after being heated on the heating plate. Protect your hands accordingly, before removing any items from the heating plate.

Only place the appliance on a stable, dry, level, heat-resistant and clean surface. The appliance may not wobble, tilt or slip on the table or counter. Do not place the appliance on inclined surfaces where it can fall over and/or fall down, or any containers will slip down from the heating plate. Do not place the appliance on glass or stone, as these materials could crack due to local heating. Do not place any clothes or tissue or other foreign objects on or under the appliance during operation, to avoid risk of fire, overheating, or electric shock. Do not block the ventilation slits of the housing. During operation, the temperature control dial must be accessible all the time (see: "Knowing Your Design Warming Tray").

1. Place the appliance on a suitable surface near a suitable wall power outlet (see: "Technical Specifications"). Turn the temperature control dial counter-clockwise to the stop ("0").

Important: In contrast to ranges and other heating devices, the desired digit on the temperature control dial must face to the black point left-handed to the temperature control dial.

2. Unwind the power cord completely and connect the appliance to the power supply.
3. Select the desired temperature setting by turning the temperature control dial clockwise. The red heating indicator will illuminate, showing that the appliance is heating. However, there could be a time delay of some minutes until the heating plate will heat up perceptible. This is normal.

⚠ WARNING-RISK OF BURNS: Even the housing and handles of the appliance will get hot during operation. Only touch the appliance at the temperature control dial during operation to avoid scalds.

4. Wait until the red heating indicator goes out, indicating that the heating plate reached the set temperature. The heating indicator will go on and out several times during operation. This is normal.

⚠ CAUTION: The appliance is not intended for heating up cold food. Only place pre-heated cooking pots/pans or warm containers onto the heating plate, when the heating plate is hot. **DO NOT** place any frozen food onto the hot heating plate. Always wait until the heating plate has reached the set temperature (heating indicator goes out), before placing any hot containers onto the heating plate. Otherwise the heating plate could crack.

5. Place your warm pots, pans or heat-resistant containers onto the heating plate to keep your food warm. Do not leave the appliance unattended while it is connected to the power supply.
6. After usage, switch OFF (turn the temperature control dial counter-clockwise to the stop) and unplug the appliance.
7. Leave the appliance cool down completely (approx. 1/2 hour). Then clean the appliance (see: "Care and Cleaning").

SOLVING PROBLEMS

If any problems occur during operation, you will find solutions in this section.

Problem	Possible Reason	The Solution
The heating indicator remains dark, the heating plate remains cold.	The appliance is not live.	<ol style="list-style-type: none"> 1. Check your power supply for the correct ratings (see: "Technical Specifications"). 2. Check, if the power outlet is live by connecting a lamp. 3. Select a temperature level at the temperature control dial. 4. If the problem persists, contact the Gastroback Customer Care Center (see: "Information and Service").
Die Kontrollleuchte leuchtet aber die Heizplatte bleibt kalt.	Die Heizplatte braucht einige Minuten, bis sie sich merklich erwärmt.	<p>Warten Sie einige Minuten ab. Wenn das Problem dadurch nicht beseitigt wird, dann wenden Sie sich an den Kundendienst (siehe: „Information und Service“).</p>

CARE AND CLEANING

⚠ WARNING: Always ensure that the appliance is out of reach of young children.

Always switch OFF the appliance (turn the temperature control dial counter-clockwise to the stop), then unplug the appliance, and wait until the appliance cooled down (at least 1/2 hour), before moving or cleaning the appliance.

Do not scratch or cut on the surfaces of the appliance. Do not use any abrasive cleaners or corrosive chemicals (e.g. bleach, oven cleaner or grill cleaner) for cleaning the appliance or any parts of it, to avoid damage to the surfaces. Do not use any hard or sharp-edged objects or brushes for cleaning any surfaces of the appliance.

Ensure to protect the appliance against splashing water and moisture. Do not immerse the appliance, or power cord in water or any other liquid, to avoid hazards due to electric shock and damage. Do not spill or drip any liquids on the appliance or power cord to avoid risk of fire and electric shock. Do not use violence! **Do not place the appliance in an automatic dishwasher.**

1. Switch OFF and unplug the appliance and leave the appliance cool down to room temperature (1/2 hour).
2. Clean the heating plate using a soft cloth slightly moistened with some dishwater. Ensure not to drip any liquids in/on the appliance. Remove all crumbs and splashes.
3. Wipe all surfaces with a clean cloth moistened with clear tap water. Thereafter, wipe dry with a soft cloth.

STORAGE

⚠ WARNING: Young children must be supervised that they do not play with the appliance or any part of it. When the appliance is not in use, always switch OFF (turn temperature control dial counter-clockwise to the stop) and unplug the appliance and leave the appliance cool down completely. Always clean the appliance and all its parts before storing to avoid accumulation of baked-on food (see: "Care and Cleaning"). Do not hold the appliance by the power cord for moving it.

Ensure to store the appliance where it is clean, dry and safe from inadmissible strain (frost, direct sunlight, mechanical or electric shock, heat, moisture) and where it is **out of reach of young children**. Do not place any hard or sharp-edged objects on the appliance.

Always handle power cords with special care. The power cord may never be knotted, twisted, pulled, strained, or squeezed. Do not let the power cord or power plug hang over the edge of the table or counter.

For storage, grasp the appliance at the handles and place the appliance on a clean and stable surface, where it cannot fall. Lay the power cord loosely beside the appliance.

NOTES FOR DISPOSAL



Dispose of the appliance and packaging must be effected in accordance with the corresponding local regulations and requirements for electrical appliances and packaging. Please contact your local disposal company.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills, dumps, or refuse incineration, hazardous substances can leak into the groundwater or can be emitted into air, thus getting into the food chain, and damaging your health and well-being as well as poisoning flora and fauna. When replacing old appliances with new once, the vendor is legally obligated to take back your old appliance for disposal at least for free of charge.

INFORMATION AND SERVICE

Please check www.gastroback.de for further information.

For technical support, please contact Gastroback Customer Care Center by phone: +49 (0)4165/22 25-0 or e-mail info@gastroback.de.

Please refer to our home page for a copy of these operating instructions in pdf format.

WARRANTY

We guarantee that all our products are free of defects at the time of purchase. Any demonstrable manufacturing or material defects will be to the exclusion of any further claim and within 2 years after purchasing the appliance free of charge repaired or substituted. There is no Warranty claim of the purchaser if the damage or defect of the appliance is caused by inappropriate treatment, over loading or installation mistakes. The Warranty claim expires if there is any technical interference of a third party without a written agreement. The purchaser has to present the sales slip in assertion-of-claim and has to bear all charges of costs and risk of the transport.

Note

Customers from Germany and Austria: For repair and service, please send Gastroback products to the following address:

Gastroback GmbH, Gewerbestr. 20, D-21279 Hollenstedt, Germany.

Customers from other countries: Please contact your dealer.

Please agree that we cannot bear the charge of receipt. Submission of appliances: Please ensure packing the appliance ready for shipment without accessories. Add the sales slip and a short fault description. The processing time after receipt of the defective appliance will be approx. 2 weeks; we will inform you automatically. After the warranty period, please send defective appliances to the given address. You will get a free quotation and, thereafter, can decide, whether we shall repair the appliance to the costs possibly accrued, send back the defective appliance for free of charge, or dispose of the appliance for free of charge.

HOUSEHOLD USE

The appliance is intended for household use only and **NOT** suited for commercial, industrial or trade usage. Do not attempt to use this appliance in any other way or for any other purpose than the intended use, described in these instructions. Any other use is regarded as unintended use or misuse, and can cause severe injuries or damage. There is no warranty claim of the purchaser if any injuries or damages are caused by unintended use.

GASTROBACK GmbH

Gewerbestraße 20 . 21279 Hollenstedt / Germany
Telefon +49(0)41 65 / 2225-0 . Telefax +49(0)41 65 / 2225-29
info@gastroback.de . www.gastroback.de