

LIVOO
Feel good moments
Instruction manual

Raclette grill fondue 12 persons



Reference : DOC234
Version : 1.5
Language : English

Bedienungsanleitung

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
2. Place the appliance on a flat, dry and stable surface.
3. Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
4. Never use this appliance if it is not working properly, if it has been dropped, damaged or if it has been dropped into water. Take it to a service centre for inspection and repair.

5. Never try to dismantle the appliance yourself.
6. There is a risk of injury if the appliance is misused.
7. Do not cover the appliance during use.
8. Do not move the appliance during use or when it is hot.
9. This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children.

10. Keep the appliance and its cord out of reach of children less than 8 years.
11. Avoid contact with hot surfaces or heat sources (hotplates, near hot gas or on a hot oven etc.).
12. CAUTION: The temperature of accessible surfaces may be high when the appliance is operating.
13. CAUTION, The surface of the heating element shows residual heat after use.
14. Always allow to cool down before storing or cleaning.
15. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Water must not enter the base of the appliance.
16. Never use this product with wet hands or feet.
17. Before connecting your appliance, make sure that the voltage in your home corresponds to the voltage indicated on the appliance's nameplate.

18. The appliance is not intended to be operated by means of external timer or separate remote control system.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
20. Do not pull on the power cord or the unit itself to unplug.
21. Do not let the cord hang over the table or counter or touch a hot surface.
22. The socket must always remain accessible when the appliance is plugged in.
23. Only connect the appliance to a socket with a built-in earth connection. If an extension cord is used, it must have a built-in earth connection and must be able to withstand the power of the appliance.
Make sure that no one is trapped inside.
24. Make sure the appliance has cooled down before cleaning and storing it.

25. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph “cleaning” in manual.
26. Do not leave the appliance unattended when it is plugged in or in operation
27. Always unplug the appliance in case of malfunction, after use or before cleaning.
28. Keep the manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be provided. Use the appliance only for private use and in the manner indicated in the instruction manual.
29. Do not use any accessories not recommended by the manufacturer as this may damage the appliance.
30. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
31. This type of device is not designed to be used continuously, it is not a professional device, it is necessary to stop it temporarily.

32. Never use the device outdoors and never leave it in a place exposed to bad weather and humidity.

33. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

TECHNICAL SPECIFICATIONS

Voltage: 230V~50-60Hz

Power: 1650W

Before using for the first time :

- Remove the packaging that protects the appliance. Do not leave them within the reach of children.
- Clean the fondue pot, plates, pans and accessories with soapy water and wipe them with a soft cloth.
- Preheat the appliance for 15 minutes without any food. It is possible that a slight smoke will be produced during the first use. This is normal; make sure that the room is well ventilated.

Place the appliance on a flat, stable and heat-resistant surface.

Be careful not to place the appliance on the edge of a table or worktop to prevent it from tipping over.

Bedienungsanleitung

Never place your appliance directly on a fragile surface, such as a glass table, cloth or plastic tablecloth, or varnished furniture.

Never place aluminium foil or any other object under the stone or the hob, and between the reflector and the heating element.

USING YOUR APPLIANCE

For use by 4, 8 or 12 people thanks to the 3 independent switches

FONDUE

- Place your device on a flat surface on the table center. Unwind the cord and plug it into a mains socket. Make sure the on/off button is set to "0" before you start using the appliance.
- Carefully fill the pan with the desired preparation (oil, broths, etc.) and make sure the level does not exceed the MAX level indicated on the inside of the pan.
- Turn the switch to the "I" position.
- Heat for approximately 20-30 minutes to bring the oil to the correct temperature.

Don't leave your forks in the warming pot for more than 5 minutes.

- At the end of use, turn the on/off button to the "0" position, unplug it and let the appliance cool down completely before handling.

We recommend that you do not use the same oil too often. It degrades quickly. Do not put water in the oil bath (risk of oil splashes and burns)

RACLETTE

1. Carefully unwind the power cable and plug in the unit.
2. Turn the switch to the "I" position.
3. Allow the appliance to preheat for 15 minutes. Place your cheese in the pans.
4. After use, turn the on/off button to the 0 position to turn off the appliance, unplug the cord from the mains and allow to cool for 1 hour before moving or cleaning.

NOTE:

Do not leave empty pans in the appliance while it is on.

Do not cut your food on the plate.

To avoid damaging the cooktop coating, always use a plastic or wooden spatula.

GRILL AND CREPES

Turn the switch to the "I" position.

Allow the appliance to preheat for 15 minutes.

Cut meat into small pieces for quick cooking, place your food on the stone plate or on the "grill" plate stone cooking plate or on the "grill" plate..

For crepes, you can put your crepe batter on the circular slots of the griddle, put more or less batter according to the desired thickness. Cook the pancakes on each side (more or less time depending on the thickness) until they are golden.

Bedienungsanleitung

After use, turn the on/off button to the 0 position to turn off the appliance, unplug the cord from the mains and allow to cool for 1 hour before moving or cleaning.

CLEANING AND STORAGE

Unplug the appliance and allow it to cool down completely before handling.

Never immerse your appliance in water and do not put it in the dishwasher.

Never use cleaning agents such as oven cleaner.

Clean the fondue pot, plates, pans and accessories with hot water, washing-up liquid and a non-abrasive sponge. Rinse the pan well.

Clean other accessories and plates with soapy water as well.

Wipe the heating base with a damp cloth if necessary and dry before storing.

Store in a cool, dry place, away from the weather.



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)**



Bedienungsanleitung

(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice