

Master Buds Max



Please refer to this manual before using the product


Table of Contents

• What's in the box	01
• Product Specifications	02
• Product Overview	03
• Wear & Adjust	04
• Power On/Off	05
• Pairing	06
• Volume and Power Button Controls	07
• Mode Switch Button Controls	08
• Auto Play/Pause, Swift Call and Dual Pairing Function	09
• Charging and LED indication	10
• Reset	11
• Warranty	12
• FCC Statement	13
• Safety	14

What's in the Box



 Wireless Headphones x 1

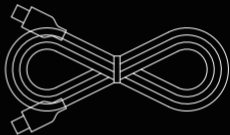

Charging Cable x 1

Travel Pouch x 1

Product Specifications

- Headphone weight: 262g
- Speaker driver size: 40mm
- Supported profiles: A2DP/AVRCP/HFP/LHDC
- Bluetooth version: 5.4
- Charging time: Approx 60 minutes
- Working voltage: 5V
- Standby time: Up to 160 hours
- Playtime without ANC: Up to 60 hours at 50% volume
- Playtime with ANC: Up to 48 hours at 50% volume
- Bluetooth range: 10m

Product Overview



1. (+) Volume Up/Next Button

3. Power Button

5. Type-C Charging Port

2. (-) Volume Down/Previous Track

4. Charging LED Indicator


6. Mode Switch Button

Wear & Adjust



Adjust the headphones to properly fit your head, and match L/R earcups with your L/R ear respectively.

Power On/Off

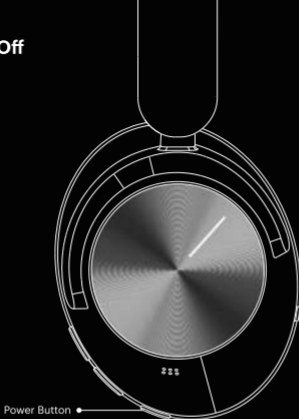

Power On: Press and hold the Power button for 2 seconds. The white LED will start blinking, indicating that the headphone is in pairing mode.

Power Off: Press and hold the Power button for 5 seconds till the white LED turns off.

Pairing

After Powering On, the headphones automatically enter pairing mode and the white LED will start blinking. Search and select Master Buds Max from the list of available Bluetooth devices. Once the connection is successful, the light will turn off.










Your Master Buds Max are now paired with your device and ready to use.






Note: Your Master Buds Max will automatically connect to the last paired device as soon as it is powered on.






Pressing the power button twice is another way to bring the device into pairing mode.




Volume And Power Button Controls

	<p> × 1 Press Once</p> <p> × 2 Press Twice</p> <p> × 2s Press and hold for 2 sec</p> <p> × 5s Press and hold for 5 sec</p>	<p> Play/Pause/Answer/End call</p> <p> Enter pairing mode</p> <p> Power On/Reject call</p> <p> Power Off</p>
---	--	--

	<p> × 1 Press Once</p> <p> × 2s Press & hold for 2 sec</p>	<p> Volume up</p> <p> Next Track</p>
---	--	--

	<p> × 1 Press Once</p> <p> × 2s Press & hold for 2 sec</p>	<p> Volume down</p> <p> Previous Track</p>
---	--	--

Mode Switch Button Controls

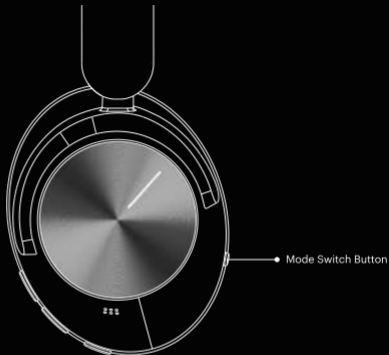

Press Once: Toggle between (ANC Mode/Adaptive ANC Mode/Transparency Mode/Normal Mode)

Press and hold for 2 sec: Activate Voice Assistant

Double Press: Switch between Spatial Audio & Music Mode.

Auto Play/Pause

When you lift the right earcup off your ear or remove the headphones, audio pauses.

To resume audio, re-place the right earcup or put on the headphones.

Swift Call™ Function

You can answer phone calls by putting on the headphones when it is connected with the Mobile Phone.

Dual Pairing – Connect Another Mobile Device

First, turn the toggle on to enable Dual Pairing on the Noise Audio App.

Then, press the power button twice to activate Pairing mode.

Now, pair and connect your second device to Master Buds Max the same way as you did with your first.

Charging

It will take around 60 minutes to fully charge. Charge the headphone via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Note: Low power mode is White LED blink twice after every 5 seconds, please charge in time.

LED Indication:


- Charging: Solid Red LED
- Fully Charged: No LED Light
- ANC mode change: Green LED blink once



Reset

Delete/Remove Master Buds Max from the list of paired devices on your phone's Bluetooth menu.

Once the device is powered on, press and hold the + and - button simultaneously for 5 seconds. A voice prompt will indicate that the headphones have been reset, and they will automatically come into pairing mode.

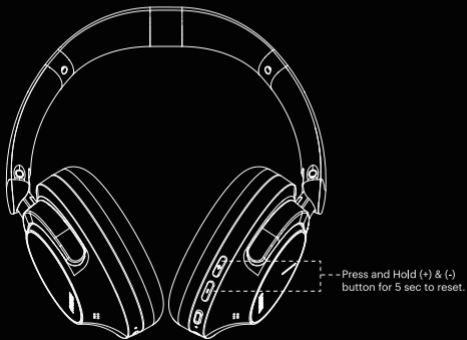

Warranty

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

Unauthorised tampering, modifications or repairs of the product.

Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

www.gonoise.com/pages/warranty-registration

 SUPPORT AND SERVICE

 1 YEAR WARRANTY



SCAN ME

Customer Query

For any assistance, please reach out to us at support.gonoise.in

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Safety For You And Your Device

Follow these tips to get the best out of your new Master Buds Max



Do not expose the headphone to liquids, moisture, or humidity as they have electronics and batteries inside.



Do not try to disassemble your headphone. There are no user-serviceable parts inside it.



Do not use abrasive cleaning solvents to clean your new headphone. Wipe them down with a slightly damp cloth if and when necessary.



Avoid dropping the headphone and keeping them away from sharp objects such as keys in your pockets.



Do not use abrasive cleaning solvents to clean your new headphone. Wipe them down with a slightly damp cloth if and when necessary.



Only charge your headphone from 5V/1A ports such as phones and laptops or PC chargers.



Do not throw the headphone in a fire to dispose them. The internal battery may explode.



Avoid listening to music at a high volume or you may permanently damage your hearing.



Pay attention to your surroundings and never wear any headphone while riding, driving, or walking in traffic.

noise

SOUND BY
BOSE